

Edge – Collar Pan Ceiling Mount 120VAC / 60Hz

Model # EGRF08LAJD1WH-PAN

Safety Precautions

- Read all safety precautions and installation instructions carefully before installing or servicing this fixture. Failure to comply with these instructions could result in potentially fatal electric shock and/or property damage.
- It is recommended that a qualified electrician perform all wiring. This fixture must be wired in accordance with all national and local electrical codes.
- Do not handle any energized fixture or attempt to energize any fixture with wet hands or while standing on a wet or damp surface or in water.
- This collar pan is designed for use with EGRF08xx Series at 120VAC, 60Hz fused circuit.
- Make sure that the power source conforms to the requirements of the fixture. (See labels on the fixture housing).
- To reduce the risk of electrical shock, and to assure proper operation, this fixture must be adequately grounded. To accomplish proper grounding, there must be a separate ground wire (green) contact between this fixture and the ground connection of your main power supply panel.
- This fixture is intended to be used for general indoor lighting in dry or damp locations.

Assembly Instructions

Step 1 – Preparing for installation

- Disconnect electrical power at the fuse or circuit breaker box before installing or servicing any part of this fixture.
- Carefully remove the fixture and hardware kit from the carton.
- Remove components from the hardware kit.
- Pull down the supply power source black (L), white (N) and green (GND) wires from the junction box then through the center wiring hole of the collar pan (1).
- Remove and discard mounting bracket (3) from behind the fixture. This bracket will not be used.

Step 2 – Collar pan mounting per Figure 1

- Install the collar pan (1) to the 3-0 or 4-0 junction box (not included) using two #8-32 screws (2) through the corresponding slots to secure it.
- Continue pulling all wires down through the large opening on the bottom corresponding to the wires coming out of the fixture (3 – not included).

Wiring – All wiring must take place inside the junction box (not included).

Caution: Make sure power is off at the fuse or circuit breaker box. Check power wires for damage or scrapes. If the power supply wires are within three inches of the DOB, use a wire suitable for at least 90°C (194°F).

Note: Most dwellings built before 1985 have supply wire rated to 60°C. Consult a qualified electrician to ensure correct branch circuit conductor before installing.

Step 3 – Wiring fixture (3)


- Make all wire connections to appropriate wire. Secure with wire nuts (provided).
- Connect the green wire from the fixture to the supply power source ground wire.
- Connect the white wire from the fixture to the white (N) wire from supply power source.
- Connect the black wire from the fixture to the black (L) wire from supply power source.
- Do not mix wires.** Pull on each wire lead to make sure connections are secure. Make certain no bare wires are exposed outside of wire connectors. Tuck all connections neatly into collar pan (1).

Step 4 – Fixture mounting per Figure 2

- Route all wires to one side of the spring clips and neatly tuck them inside the collar pan (1).
- Align the spring clips with the slots in the collar pan (1), then gently press the fixture upward until both spring clips securely snap into place. Ensure the fixture is fully seated and securely retained by the spring clips.

Step 5 – Power to the fixture can now be restored

Figure 1

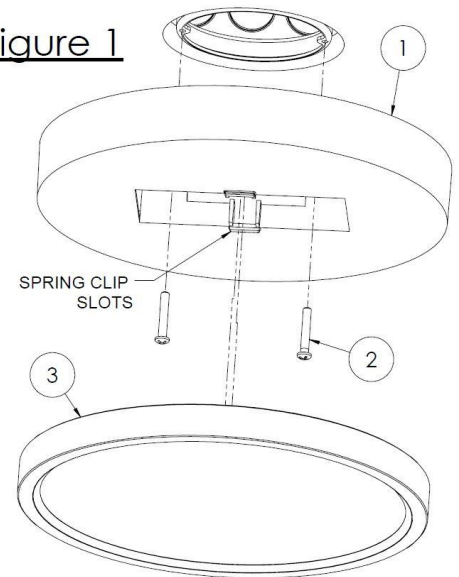

View shown for reference only. Individual models may vary.


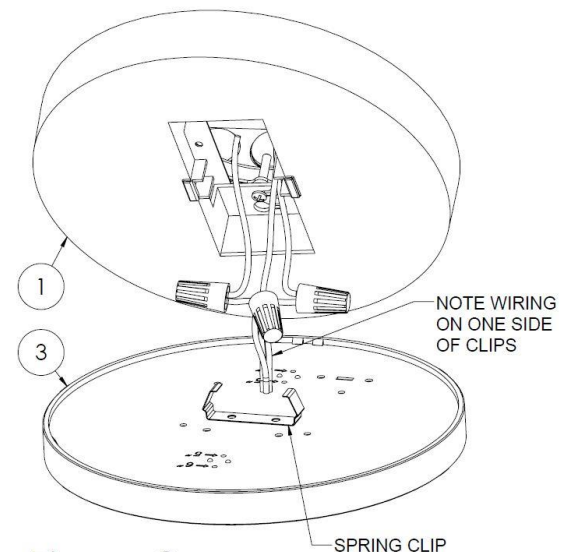


Figure 2

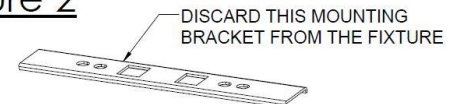 

Limited Factory Warranty

AFX Inc. hereby warranty that this fixture is free from defects in materials and workmanship when installed and used under normal operating conditions for a period of 5 years from date of shipment from factory. This warranty covers all component parts and extends only to replacement of defective fixture or components; it does not cover failure due to improper installation, misuse, mishandling or damage incurred in transit.